FreeX

Home FreeX Printer FreeX SuperRoll Labels Verified Reviews

Quick Start Guide Blogs FAQ

요 Q =

HOW TO PRINT THERMAL LABELS VIA USB ON WINDOWS 10?

For Windows 10,

1: Download the FreeX Software


Click here to download the latest driver and WiFi Toolbox software.

2: Install the FreeX Driver

• Once downloaded, go in your downloads folder, and unzip the Driver and Toolbox Software you just downloaded




· Click on FreeX Driver and Install it

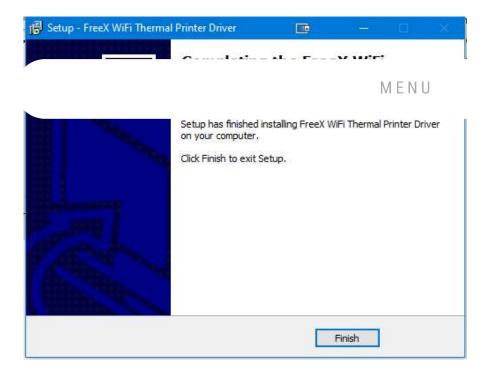

3: Power on and Connect via USB Port

- Plug in the printer to a power source with the power cable
- Plug in the printer to your computer with the USB cable
- Press shortcut WIN+S, go to "Printers & Scanners"

MENU

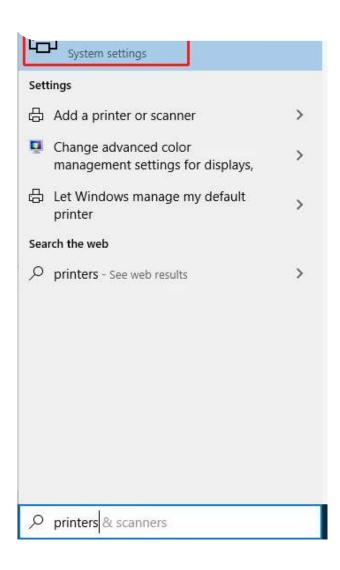


• Or you can access the "Printer & Scanners" from the start menu > Settings > Devices > Printers & scanners



Update & Security
Windows Update, recovery,


backup

MENU

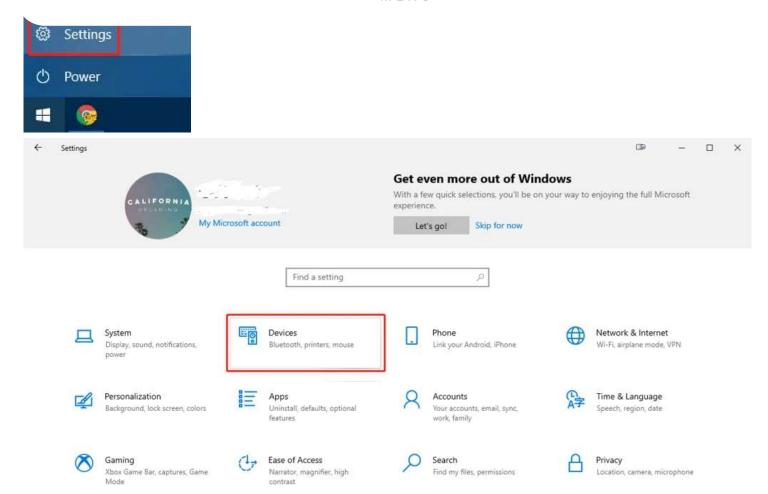



MENU

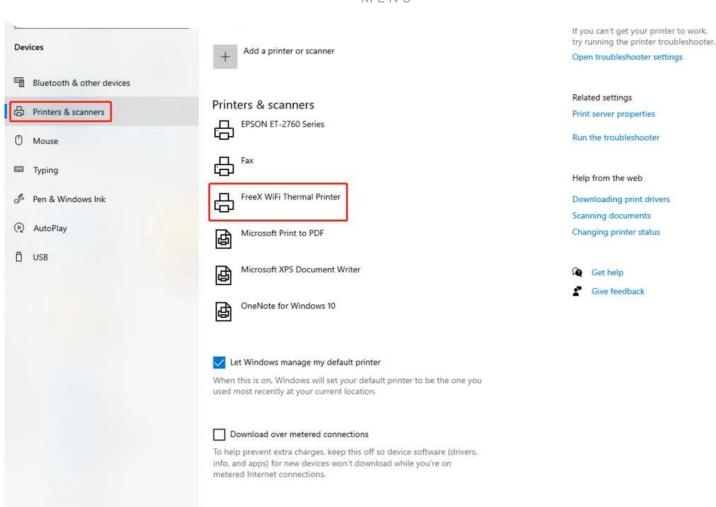

Make sure FreeX Thermal Printer appears on the list of printers and you are ready to go

Next Step: Configure the WiFi of FreeX Thermal Printer

Since you're using Windows, follow this quick guide.

If you're using **MacOS**, please follow this quick guide.



© 2021 FreeX